


# REBUILDING YOUR FLOODED HOME:

Guidelines for  
Incorporating  
Energy  
Efficiency

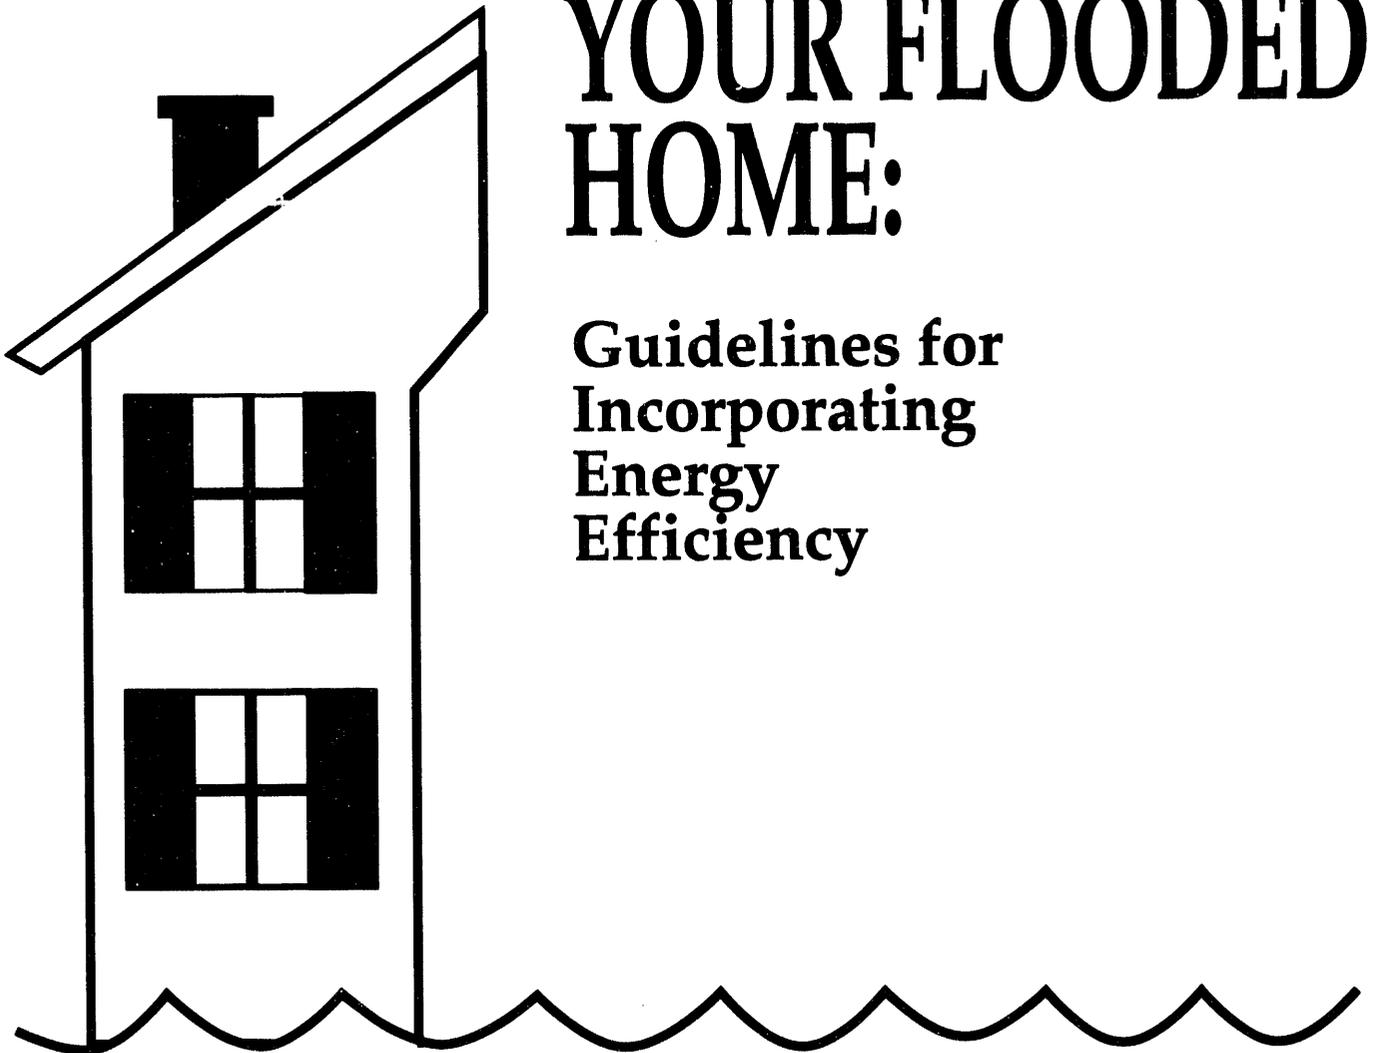

U.S. DEPARTMENT OF ENERGY  
Assistant Secretary for Energy Efficiency  
and Renewable Energy  
Office of Building Technologies  
Washington, D.C. 20585

May 1994

MASTER

DISTRIBUTION OF THIS DOCUMENT IS UNLIMITED

## **Acknowledgement**

This document was prepared by Oak Ridge National Laboratory, Oak Ridge, Tennessee. Contributors to the document were Jan Kosny, John Tomlinson, and Melissa Voss from Oak Ridge National Laboratory, and Joseph Lstiburek from Building Science Corporation. Additional contributions were provided by Roger McDonald at Brookhaven National Laboratory. Additional editorial and technical assistance were provided by the Bob Corbett, Valori Mourich, and George Everett of the National Center for Appropriate Technology, and Donna Hawkins and Helen Krupovich of the Office of Building Technologies, Assistant Secretary for Energy Efficiency and Renewable Energy, Department of Energy.

# Table of Contents

<b>Introduction</b>	<b>1</b>
<b>Part 1: Do's and Don'ts About Personal Safety and Entering the Home After a Flood</b>	<b>2</b>
<b>Part 2: Drying Out Your Home</b>	<b>5</b>
<b>Part 3: Planning for Rebuilding – Adding Energy Efficiency</b>	<b>10</b>
<b>Building Shell Issues</b>	<b>10</b>
<b>Building Systems and Equipment Issues</b>	<b>19</b>
<b>Appliances</b>	<b>26</b>
<b>Part 4: Summary</b>	<b>29</b>
<b>Part 5: Appendices</b>	
1. <b>Manufacturers of Moisture Meters</b>	<b>32</b>
2. <b>Other Sources of Information</b>	<b>33</b>
3. <b>Comparing Heating Fuel Costs</b>	<b>34</b>